


CEILING/ WALL LIGHT WITH REMOTE

INSTRUCTIONS

1


Twist the back cover of the light counter clockwise to open.

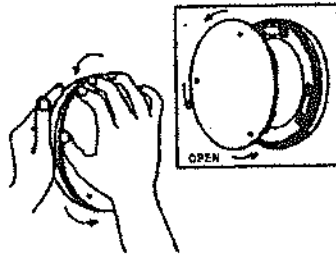


Insert batteries in the back of the light and remote as shown.

2

CAUTION
Only use batteries of the same type. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Do not mix old and new batteries.

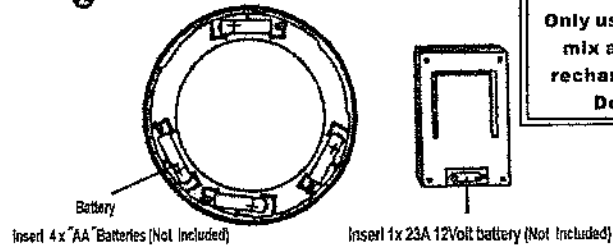



3

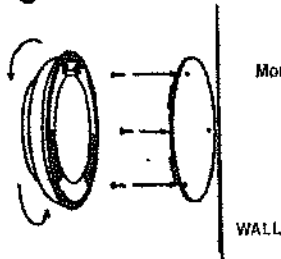

Mount the back plate to a wall or ceiling (screws included).

4

Mount the remote to the wall (screws included).

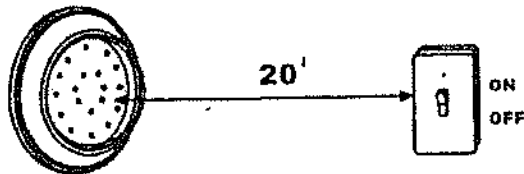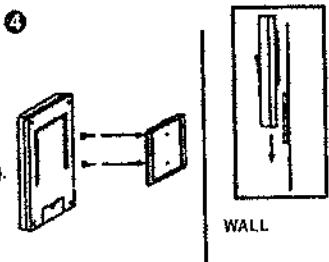

The remote will work with up to 4 lights at 20 feet away.